

Single Cartridge Housings

Commercial/Industrial

Designed for 300 psi in 304 or 316 stainless steel.

- FSSS Series Filter Housings are designed with a double o-ring compression which allows for positive sealing and easy access. Offered in DOE (double open end), 222/Flat and 226/Flat configurations.

Features

- ▶ 304 or 316 stainless steel construction
- ▶ 300 PSI (20.7 bar) pressure rating
- ▶ Electropolished finish
- ▶ Offered in Double Open End 222/Flat or 226/Flat configurations
- ▶ Double o-ring compression seal for easy change out
- ▶ Includes 1/4" NPT drain
- ▶ Inline design for easy installation
- ▶ Knife edge seal at both cartridge ends to eliminate by-pass for DOE cartridges
- ▶ Standard with wrench and mounting bracket




FSSS-1
Series

FSSS-2
Series

Applications

- ▶ Food & Beverage Filtration
- ▶ Reverse Osmosis Pre-filtration
- ▶ Process Water Filtration
- ▶ Cutting Fluids
- ▶ Lubricants
- ▶ Plating Solutions
- ▶ High Purity Water
- ▶ Inks



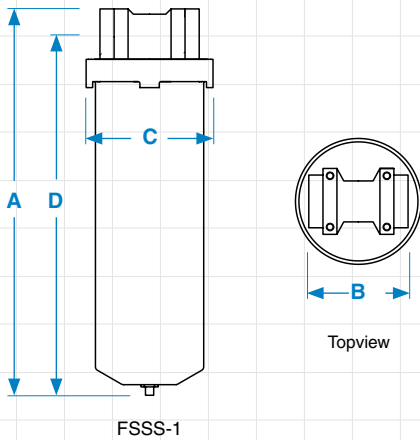

Optional Housing Selection for different style End Cap Configurations




Ordering Information

| Filter Model | Length | Inlet/Outlet Pipe Size | End Configuration | Material | A Filter Ht. | B I/O Width | C Diameter | D Inlet |
|--------------|--------|------------------------|-------------------|----------|--------------|-------------|------------|---------|
| FSSS-1A | 9-3/4" | 3/4" | DOE | 316 SS | 13.75" | 3.3" | 4.15" | 12.75" |
| FSSS-1B | 9-3/4" | 3/4" | DOE | 304 SS | 13.75" | 3.3" | 4.15" | 12.75" |
| FSSS-1A-222 | 9-3/4" | 3/4" | 222/Flat | 316 SS | 13.25" | 3.3" | 4.15" | 14.75" |
| FSSS-1A-226 | 9-3/4" | 3/4" | 226/Flat | 316 SS | 13.25" | 3.3" | 4.15" | 14.75" |
| FSSS-2A | 20" | 1" | DOE | 316 SS | 23.75" | 3.3" | 4.15" | 22.75" |
| FSSS-2B | 20" | 1" | DOE | 304 SS | 23.75" | 3.3" | 4.15" | 22.75" |
| FSSS-2A-222 | 20" | 1" | 222/Flat | 316 SS | 23.25" | 3.3" | 4.15" | 24.75" |
| FSSS-2A-226 | 20" | 1" | 226/Flat | 316 SS | 23.25" | 3.3" | 4.15" | 24.75" |
| FSSS-3A | 30" | 1" | DOE | 316 SS | 23.25" | 3.3" | 4.15" | 32.75" |
| FSSS-3B | 30" | 1" | DOE | 304 SS | 23.25" | 3.3" | 4.15" | 32.75" |

Specifications


- ▶ **Finish** - electropolished
- ▶ **Inlet/Outlet** - 3/4" on 9-3/4" housings, 1" on 20" and 30" housings
- ▶ **Construction** - 304 or 316 stainless steel
- ▶ **Pressure** - up to 300 PSI (20.7 bar) max
- ▶ **Temperature** - up to 250°F (121°C) (filter housing only)
- ▶ **O-ring Closure Seal** - EPDM (standard)

Cap

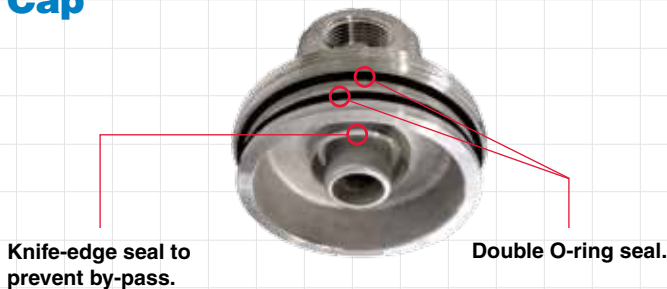

Pressure Drop

Based on 3/4" and 1" inlet/outlet housings, without cartridges.

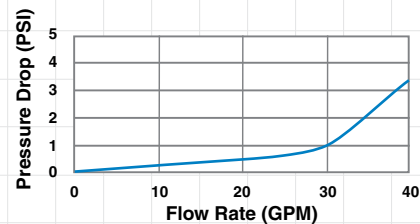

Note: This publication is to be used as a guide. The data within has been obtained from many sources and is considered to be accurate. Harmsco does not assume liability for the accuracy and/or completeness of this data. Changes to the data can be made without notification. Temperature, Pressure, Flow Rates, Differential Pressures, Chemical Combinations and other unknown factors can affect performance in unknown ways. **Limited Warranty:** Harmsco warrants their products to be free of material and workmanship defects. Determination of suitability of Harmsco products for uses and applications contemplated by Buyer shall be the sole responsibility of Buyer. The end user/installer/buyer shall be liable for the product's performance and suitability regarding their specific intended applications. End users should perform their own tests to determine suitability for each application.



HARMSCO® Filtration Products

P.O. Box 14066, North Palm Beach, FL 33408

(561) 848-9628 • Toll-free: (800) 327-3248 • Fax: (561) 845-2474 • E-mail: sales@harmsco.com

www.harmsco.com



© Harmsco, Inc.