



AF SERIES

CARBON

KEY FEATURES

- **USES RESINTECH® PREMIUM ACID WASHED CARBON**
- **PROP 65 COMPLIANT FOR DRINKING WATER APPLICATIONS**
- **FITS STANDARD RESIDENTIAL AND INDUSTRIAL HOUSINGS**

CARBON CARTRIDGES

Carbon filtration is an inexpensive and effective way to remove chemicals and contaminants commonly found in tap water. Aries FilterWorks carbon cartridges are an ideal choice for taste and odor control, chlorine removal, and organic reduction. Premium carbons are available in coal or coconut shell and are acid washed for a balanced.

California Prop 65 compliance ensures each lot of media complies with EPA recommended levels of contaminants, including arsenic.

APPLICATIONS

RESIDENTIAL USE -

Carbon cartridges used as part of a water treatment system, improves water quality by removing harmful contaminants from municipal water supplies.

PRE-TREATMENT TO REVERSE OSMOSIS (RO) -

Provides protection by removing contaminants such as chlorine and organics that can foul RO membranes.

POINT-OF-USE (POU) DRINKING WATER SYSTEMS -

Cartridge provides a source of clean water and is more cost effective than purchasing bottled water. It can be used as a standalone filter to reduce or eliminate: bad tastes and odors, chlorine and organic contaminants in municipal water supplies. The use of carbon cartridges significantly improves drinking water quality.

ABOUT CARBON

Activated carbon has remarkable absorptive properties, which makes it effective in removing chlorine, sediment and Volatile Organic Compounds (VOCs). The Carbon particles have a large surface area, allowing a small amount of carbon to efficiently filter large volumes of water. As water passes through the carbon filter many chemicals and contaminants in the water are bonded at a molecular level to the carbon, effectively removing them from the water. A large percentage of chemical compounds and organic contaminants, that cause taste and odor problems are removed by carbon.

FEATURES & BENEFITS

- **USE OF RESINTECH® PREMIUM FINE MESH CARBON STANDARD**

Optimum mesh size provides more surface area to enhance organic adsorption and chlorine conversion

- **AVAILABLE IN ACID WASHED CARBON**

Acid washing reduces carbon fines, prevents pH spiking, improves rinse up time, and adds approximately 5% more capacity to carbon media

- **OVERSIZED CARTRIDGE FOR MAXIMUM MEDIA FILL**

AF Series cartridges have up to 50% higher capacity and extend cartridge life, due to the use of larger cartridges.

- **QUALITY PRODUCED AND MADE IN THE USA**

To ensure consistent quality and peace of mind for the consumer all drinking water media are WQA Gold Seal or NSF certified. Cartridges are produced by Aries FilterWorks, a division of ResinTech®. Strict quality control over all aspects of production allows complete traceability of every cartridge



AF SERIES - CARBON


TECHNICAL DATA

	10" SLIM	20" SLIM	10" SUPER BLUE	20" SUPER BLUE
Diameter (in.)	3.0"	2.9"	4.6"	4.6"
Length (in.)	9.9"	20.0"	10.0"	20.0"
Temperature (°F.)				
Min.	40°	40°	40°	40°
Max.	100°	100°	100°	100°
Pressure (psi)				
Min.	20	20	20	20
Max.	125	125	125	125
Micron Rating (μ)	25	25	25	25
Materials of Construction				
① Gasket	TPE	TPE	TPE	TPE
② Cap	PP	ABS	ABS	ABS
③ Pad	PE	PE	PE	PE
④ Body / Tube	PP	ABS	ABS	ABS
⑤ Media	ResinTech® Premium Granular Activated Carbon*			

PP Polypropylene
ABS Acrylonitrile Butadiene Styrene

PE Polyester
TPE Thermoplastic Elastomer

GAC DELTA P

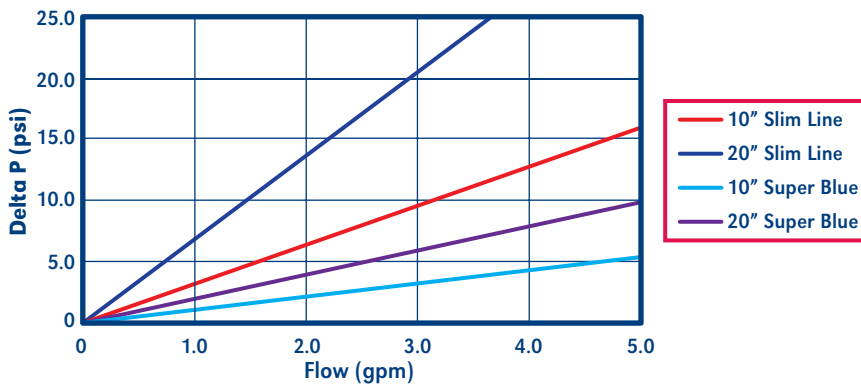

MEDIA

As a division of ResinTech, Inc.®, Aries FilterWorks is the only integrated water filtration media and cartridge manufacturer providing a premium product at the most competitive cost. Aries builds technology and knowledge of ion exchange and specialty adsorbents into each cartridge. Strict quality control over all aspects of cartridge production allows complete traceability of every filter.

ORDERING GUIDE

PART NUMBER	MEDIA	STANDARD HOUSING DIAMETER x LENGTH	FLOW RATE (GPM)		CAPACITY (GALLONS)
			OPERATING	MAXIMUM	
AF-10-1051	ResinTech® Premium	2.5" x 10"	.75	1.0	4,000
AF-20-1051	AGC40-AW / AGC50-AW	2.5" x 20"	1.0	2.0	9,000
AF-10-1041-BB	Acid Washed	4.5" x 10"	2.0	4.0	13,000
AF-20-1041-BB	Coal GAC*	4.5" x 20"	3.0	5.0	30,000
AF-10-1052	ResinTech® Premium	2.5" x 10"	.75	1.0	4,000
AF-20-1052	AGC40-CSAW / AGC50-CSAW	2.5" x 20"	1.0	2.0	9,000
AF-10-1046-BB	Acid Washed	4.5" x 10"	2.0	4.0	13,000
AF-20-1046-BB	Coconut Shell GAC*	4.5" x 20"	3.0	5.0	30,000

* Non-acid washed carbon available upon request




Notes: Ordering information subject to change without notice. Please verify all specifications prior to ordering.

To place an order call (856) 626-1550 or e-mail ariescs@ariesfilterworks.com

IMPORTANT NOTICE TO USER:

The following is made in lieu of all other warranties expressed or implied. Manufacturer's and Seller's only obligation shall be to issue credit against the purchase or replacement of the equipment proved to be defective in material or workmanship. Neither Manufacturer nor Seller shall be liable for any injury, loss or damage, direct or indirect, special or consequential, arising out of the use of, misuse, or the inability to use such product. The information contained herein is based on technical data and tests which we believe to be reliable and is intended for use by persons having technical skill at their discretion and risk. Since conditions of use are outside ResinTech's control, we can assume no liability whatsoever for results obtained or damages incurred through the application of the data presented. This information is not intended as a license to operate under, or a recommendation to infringe upon, any patent of ResinTech's or others covering any material or use. The foregoing may not be altered except by written agreement signed by officers of the manufacturer.

DS-AFCarbon-rev1.3

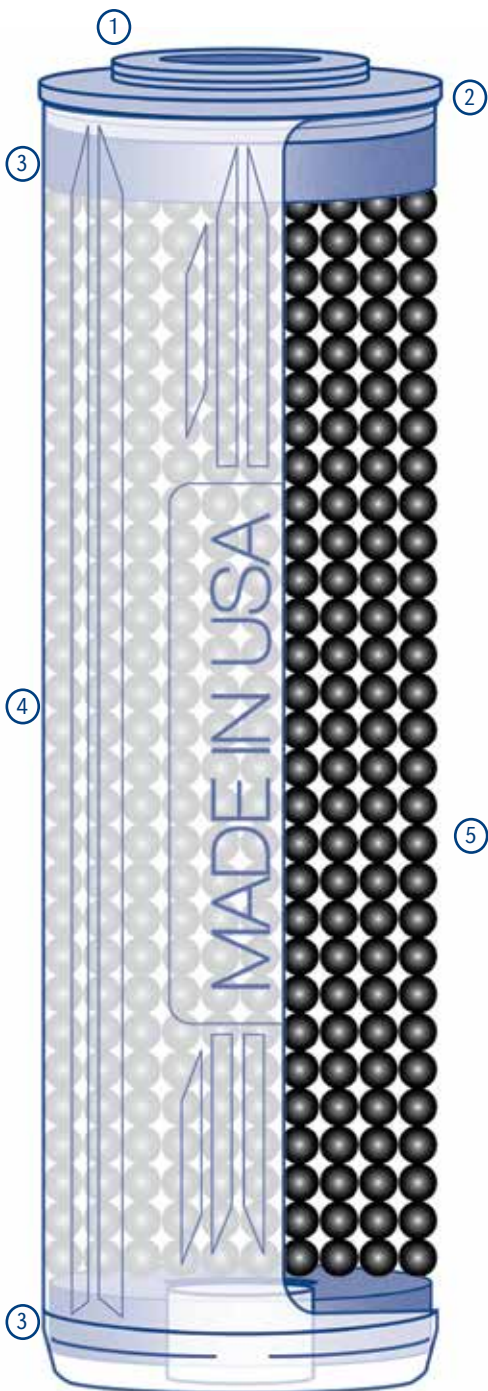

*ResinTech® GAC
WQA/NSF 61 Gold Seal Certified
for Material Safety.