


PENTEK® CFB SERIES

MODIFIED MOLDED BLOCK CARTRIDGES

SEDIMENT FILTRATION AND CHLORINE TASTE & ODOR REDUCTION IN A SINGLE CARTRIDGE

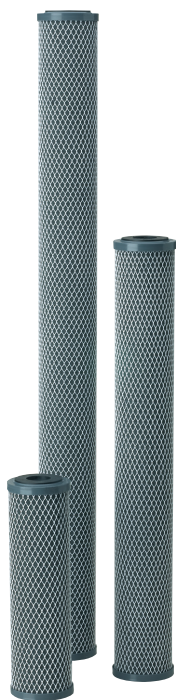

Features Fibredyne™ technology

Pentair® Pentek® CFB Series Cartridges provide the effective chlorine taste & odor reduction found in traditional carbon block media while offering excellent sediment reduction capabilities.*

CFB Series Cartridges are a modified molded block created by use of our proprietary Fibredyne™ technology. This technology creates a unique filter media by attaching powdered activated carbon onto a cellulose-free synthetic fiber matrix. The result is a single cartridge that combines the benefits of both a sediment filter and a carbon block into a single cartridge. Fibredyne's carbon block technology also offers up to two times the chlorine taste & odor reduction and dirt holding capacity of traditional blocks.* In addition, this technology will not release fines into the effluent stream due to a unique post-filtration layer that is fused to the carbon/fiber media blend.

CFB Series Cartridges are an ideal choice for a wide range of residential, food service, commercial and industrial applications.

FEATURES/BENEFITS

Nominal 10 micron rating*

Excellent dirt holding capacity*

High chlorine taste & odor and bad taste and odor reduction*

Economic choice for high sediment applications leading to premature plugging

SPECIFICATIONS

Filter Media – Bonded PAC

Endcaps – Polypropylene

Netting – Polyethylene

Gaskets – Santoprene

Temperature Rating – 40-180°F (4.4-82.2°C)



Tested and Certified by NSF International to NSF/ANSI Standard 42 for material requirements only.

* Based on manufacturer's internal testing.

SPECIFICATIONS AND PERFORMANCE

MODEL #	PART #	MAXIMUM DIMENSIONS	RATING (NOMINAL)*	INITIAL ΔP (PSI) @ FLOW RATE (GPM)*	CHLORINE TASTE & ODOR REDUCTION @ FLOW RATE (GPM)*
CFB-10	255671-43	2.88" x 9.75" (73mm x 248mm)	10 micron	3.0 psi @ 1 gpm (0.20 bar @ 3.8 Lpm)	>5,000 gallons @ 1 gpm (>18,927 L @ 3.8 Lpm)
CFB-20	255672-43	2.88" x 20" (73mm x 508mm)	10 micron	3.0 psi @ 2 gpm (0.20 bar @ 7.6 Lpm)	>10,000 gallons @ 2 gpm (>37,854 L @ 7.6 Lpm)
CFB-30	255673-43	2.88" x 30" (73mm x 762mm)	10 micron	3.0 psi @ 3 gpm (0.20 bar @ 11.4 Lpm)	>15,000 gallons @ 3 gpm (>56,781 L @ 11.4 Lpm)

*Based on manufacturer's internal testing.

NOTES: Performance capacity depends on system design, flow rate and certain other application conditions. Cartridges may contain a very small amount of carbon fines (very fine black powder). After installation, follow the instructions for flushing the cartridge to remove the fines before using the water. You should flush the tap at least 20 seconds prior to using water for drinking or cooking purposes. This is particularly important if the tap has not been used daily. Micron ratings based on 85% or greater removal of given particle size. Estimated capacity using 2 ppm free available chlorine at 0.5 ppm breakthrough.

WARNING: Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.



FILTRATION & PROCESS

5730 NORTH GLEN PARK ROAD, MILWAUKEE, WI 53209
 P: 262.238.4400 | F: 262.238.4404 | WWW.PENTAIRAQUA.COM | CUSTOMER CARE: 800.279.9404

All Pentair trademarks and logos are owned by Pentair, Inc. or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice. Pentair is an equal opportunity employer.

310113 REV D AP14 © 2014 Pentair Residential Filtration, LLC All Rights Reserved.