


PENTEK® BFS/BBFS SERIES

BASIC FILTRATION SYSTEMS

PRE-ASSEMBLED SYSTEMS WHERE SPACE IS LIMITED

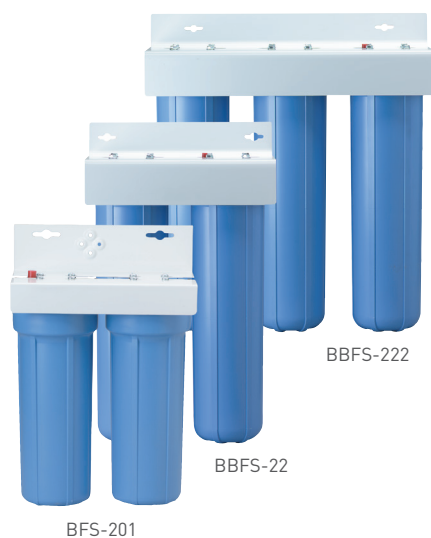

Pentair® Pentek® BFS and BBFS Basic Filtration Systems consist of either two or three filter housings, which are mounted in series, a wall-mounting bracket and hardware.

The BFS-201 features two 3/8" NPT low-profile Slim Line® Housings in series for installations where space is limited. The BBFS systems consist of a series of large-capacity 1" NPT #20 Big Blue® housings allowing for greater cartridge capacities and higher flow rates. All systems are equipped with a pressure relief button to relieve housing pressure during cartridge changes, and are shipped completely pre-assembled, saving valuable installation time.

All filter housings are manufactured of a durable polypropylene, have excellent chemical resistance and are ideal for many residential, commercial and industrial applications.

FEATURES/BENEFITS

Multi-housing systems include wall-mounting bracket and hardware

Available with low-profile Slim Line® or large capacity Big Blue housings

All systems are shipped completely pre-assembled, saving valuable installation time

MATERIALS OF CONSTRUCTION

Cap – Polypropylene

Housing – Polypropylene

Bracket – Powder coated carbon steel

O-Rings – Buna-N

Maximum Temperature – 100°F (37.8°C)

APPLICATIONS

Home

Whole House Filtration to Reduce:

Rust Particles
Iron (insoluble)
Sediment
Bad Taste & Odor
Chlorine Taste & Odor

Commercial

Deionization
Coalescing
Combination
Sediment/Rust Particles

Bad Taste & Odor
Duplexing

Industrial

Step-down Filtration
Circulating Baths
Plating
Batch Treatments
Color Reduction
Organic Reduction
Cooling Towers
Pre RO Filtration
Duplexing

SPECIFICATIONS AND PERFORMANCE

PART #	MODEL #	MAXIMUM DIMENSIONS	MAXIMUM PRESSURE	FLOW RATE*	HOUSING QUANTITY	HOUSING SIZE
160196	BFS-201	10-1/2" x 5-1/4" x 14" (267 mm x 133 mm x 356 mm)	125 psi (8.62 bar)	up to 10 gpm (37.9 Lpm)	2	3/8" Slim Line®
160166	BBFS-22	15-1/4" x 8-1/2" x 26-1/2" (388 mm x 216 mm x 673 mm)	90 psi (6.2 bar)	up to 40 gpm (151.4 Lpm)	2	1" #20 Big Blue®
160168	BBFS-222	23-1/4" x 8-1/2" x 26-1/2" (591 mm x 216 mm x 673 mm)	90 psi (6.2 bar)	up to 40 gpm (151.4 Lpm)	3	1" #20 Big Blue®

* Actual flow rate may vary and is dependent on the cartridge used.



FILTRATION & PROCESS

5730 NORTH GLEN PARK ROAD, MILWAUKEE, WI 53209
P: 262.238.4400 | F: 262.238.4404 | WWW.PENTAIRAQUA.COM | CUSTOMER CARE: 800.279.9404

All Pentair trademarks and logos are owned by Pentair, Inc. or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice.

Pentair is an equal opportunity employer.

310089 REV C MY14 © 2014 Pentair Residential Filtration, LLC. All Rights Reserved.